



## NXT Electronic Ignition Battery Spark Module- Manual Module 9 Volt 2-Output 2+0

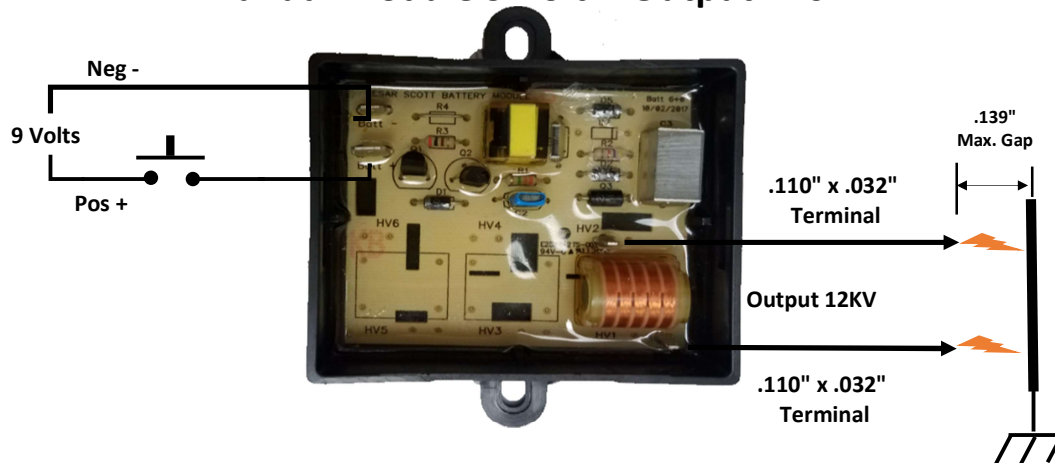


FIGURE 1 2-OUTPUT MODULE

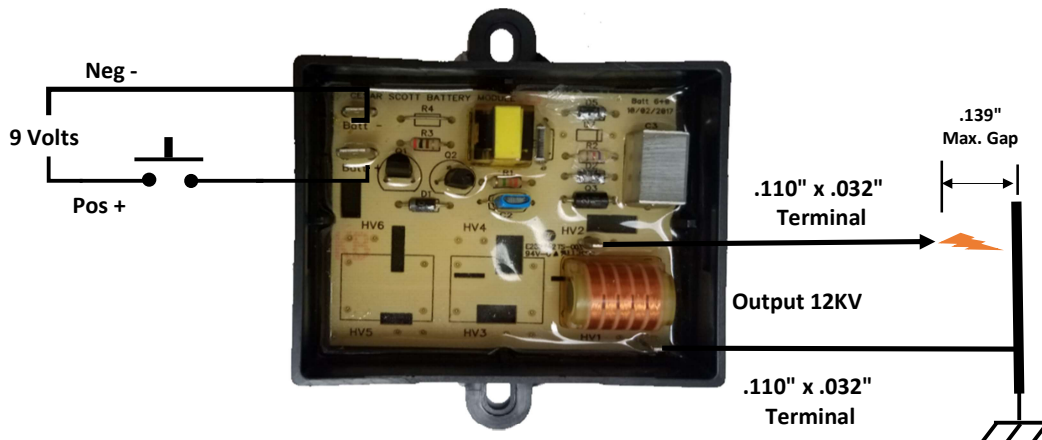


FIGURE 2 1-OUTPUT MODULE

### INSTRUCTIONS

Both outputs of this module must be connected. If using the module with 2 outputs connect the outputs as shown in Figure 1 above. Notice: the spark gap must not exceed .139" and wire length should not exceed 48"

If only one output is used, connect the outputs as shown in figure 2. One output must be grounded.

Connect the battery as shown observing polarity. CAUTION: Once power is applied the module will start sparking. To avoid a shock be careful not to contact the output terminals during operation.

Contact Information:  
Cesar-Scott Inc  
1731 Myrtle Ave.  
El Paso, TX 79901  
Phone: 1-800-880-3212  
1-915-543-3212